



STEP 2

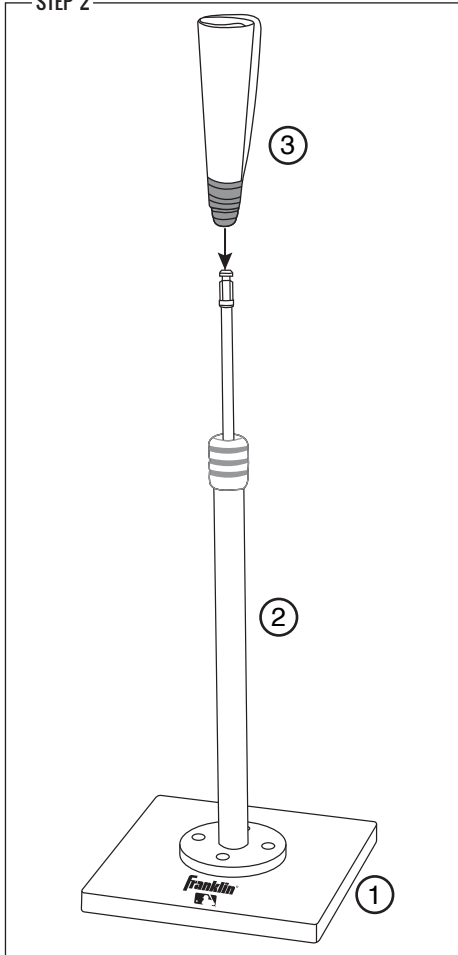


PARTS

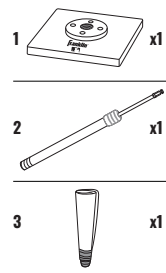

NOTE

Line up the Coiled Tee Topper (#3) opening with the top of the upper post and snap into place.

TEE TOPPER REPLACEMENT

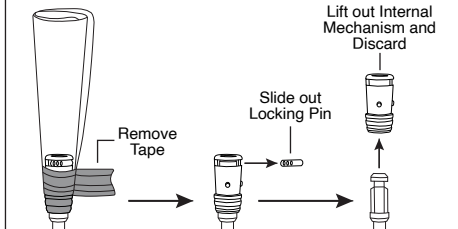

GENERAL NOTES

- To replace tee topper, cut through or unravel external tape to release coiled rubber and expose internal locking mechanism. Slide out locking pin from the internal topper mechanism and discard. Then, snap the replacement topper onto upper post.

YOU ARE NOW READY TO PLAY!

Made In China
Franklin Sports Inc.
Stoughton, MA 02072



Franklin®



TOTAL TEE®

ITEM NUMBER: **24905**



U.S. Patent No. 9,220,965

NOTE: PRINT FRONT TO BACK



CUSTOMER SERVICE COMMITMENT

Thank you for purchasing this Franklin® product! In the event that the product you've purchased has missing or damaged parts, please contact us at:

parts@franklinsports.com

or

Visit our website at: franklinsports.com/instructions

If possible, please include product part number and parts description so we can best assist you.


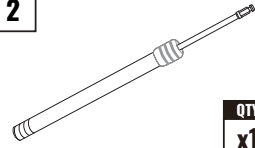

WE'RE HERE FOR YOU!

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE IT WAS PURCHASED FROM.

WE ARE COMMITTED TO FULFILLING ALL REPLACEMENT PART NEEDS IMMEDIATELY.

Thank you for your continued support, and welcome to the #FranklinFamily!

PARTS LIST


 <p>1</p> <p>QTY x1</p>	 <p>2</p> <p>QTY x1</p>	 <p>3</p> <p>QTY x1</p>
<p>Base Rep. Part: 24905-R1</p>	<p>Twist & Lock Post Rep. Part: 24905-R2</p>	<p>Coiled Tee Topper Rep. Part: 24906</p>

ASSEMBLY INSTRUCTIONS


GENERAL NOTES

- Remove all parts from the display box to ensure that you have all of the parts listed.

STEP 1

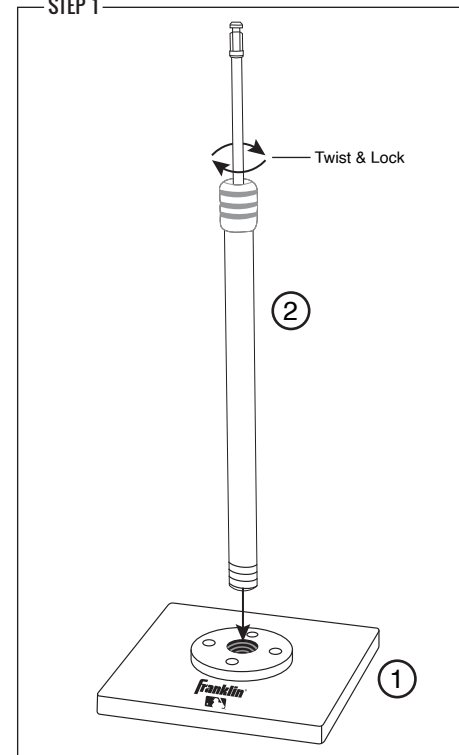

PARTS

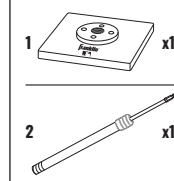

NOTE

- Screw **Twist & Lock Post (#2)** into the **Base (#1)**, twist clockwise until secure.

GENERAL NOTES

- To adjust height, twist upper post counterclockwise to release locking mechanism and adjust upper post to the preferred height. Twist upper post clockwise to lock into place.