

Franklin[®]

AGES 6+

3-in-1 ARCADE CENTER

ITEM NUMBER: **54044**

For all your replacement part needs, please visit:
www.franklinsports.com/54044











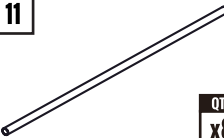
 
 
 

 
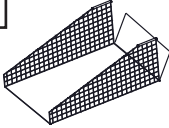
 


 
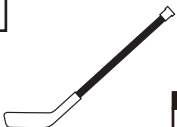

Please visit
www.franklinsports.com/54044
for instructional video




 
 

WARNING:

CHOKING HAZARD--Small parts.
Not for children under 3 yrs.
Adult assembly required.

PARTS LIST

1  Tube 1 (26mm x 440mm) Rep. Part: 54044-R1 QTY x2	2  Tube 2 (26mm x 140mm) Rep. Part: 54044-R2 QTY x2	3  Tube 3 (26mm x 610mm) Rep. Part: 54044-R3 QTY x6	4  Tube 4 (26mm x 480mm) Rep. Part: 54044-R4 QTY x2	5  Tube 5 (26mm x 290mm) Rep. Part: 54044-R5 QTY x2
6  Tube 6 (26mm x 570mm) Rep. Part: 54044-R6 QTY x2	7  Tube 7 (26mm x 100mm) Rep. Part: 54044-R7 QTY x2	8  Tube 8 (26mm x 765mm) Rep. Part: 54044-R8 QTY x2	9  Tube 9 (26mm x 760mm) Rep. Part: 54044-R9 QTY x4	10  Tube 10 (26mm x 375mm) Rep. Part: 54044-R10 QTY x4
11  Tube 11 (26mm x 905mm) Rep. Part: 54044-R11 QTY x8	12  Elbow Connector Rep. Part: 54044-R12 QTY x2	13  3 Way Connector Rep. Part: 54044-R13 QTY x6	14  T-Connector Rep. Part: 54044-R14 QTY x14	15  Straight Connector Rep. Part: 54044-R15 QTY x4
16  Backboard Rep. Part: 54044-R16 QTY x1	17  Ball Return Rep. Part: 54044-R17 QTY x1	18  Net Rep. Part: 54044-R18 QTY x1	19  Basketball Rep. Part: 54044-R19 QTY x4	20  Soccer Ball Rep. Part: 54044-R20 QTY x1
21  Air Pump Rep. Part: 54044-R21 QTY x1	22  Hockey Stick Rep. Part: 54044-R22 QTY x2	23  Hockey Ball Rep. Part: 54044-R23 QTY x1		

PRE-INSTALLED

P1  Rim Net Rep. Part: 54044-RP1 QTY x2	P2  Electronic Scorer Rep. Part: 54044-RP2 QTY x1	P3  Rim with Paddle Rep. Part: 54044-RP3 QTY x2	P4  Hooks Rep. Part: 54044-RP4 QTY x4
--	--	--	---

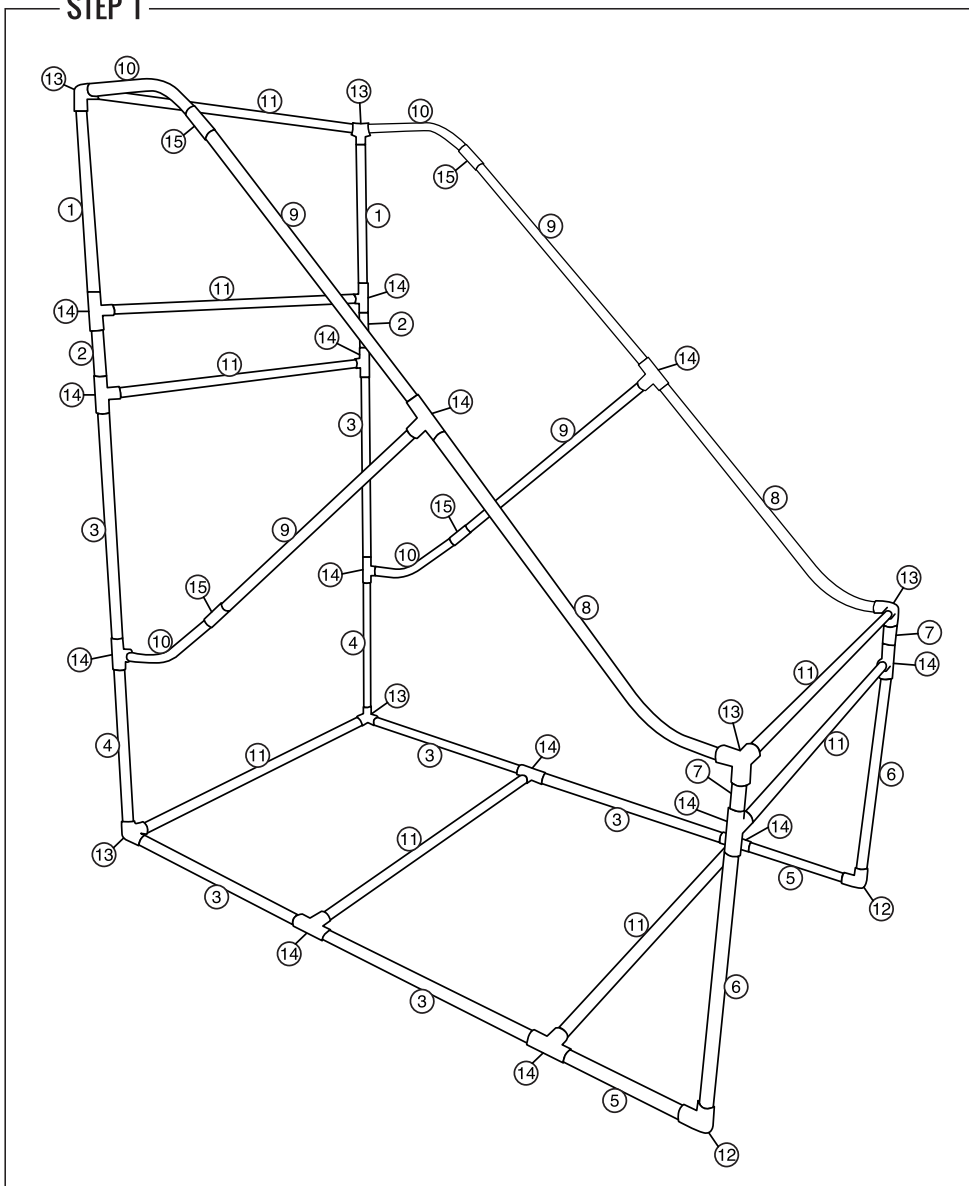
ASSEMBLY INSTRUCTIONS

GENERAL NOTE

1. Find a clean, level place to begin the assembly of your 3-in-1 Game. We recommend that two adults work together to assemble this 3-in-1 Game.

2. Remove all the parts from the box and verify that you have all of the listed parts as shown on the parts list page. Carefully cut or tear the four corners of the box so that the bottom of the box can be used as your work surface.

STEP 1




PARTS

1		x2
2		x2
3		x6
4		x2
5		x2
6		x2
7		x2
8		x2
9		x4
10		x4
11		x8
12		x2
13		x6
14		x14
15		x4


NOTE


Assemble frame as shown.

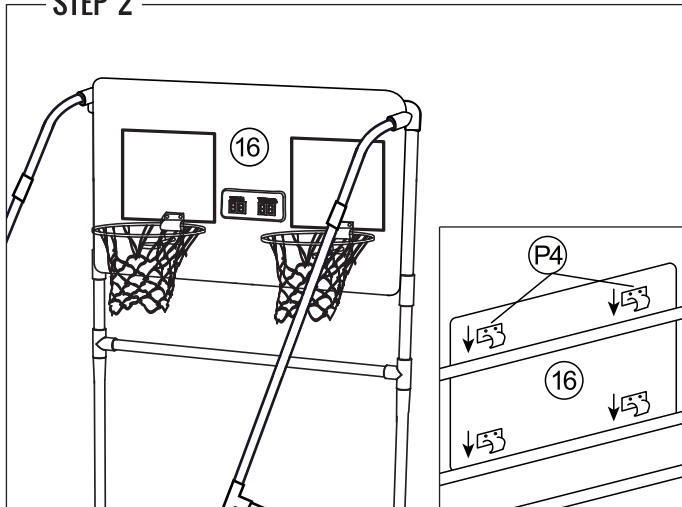STEP 2



PARTS

 
16  x1

P4  x4

NOTE

Attach the **Backboard** (#16) to the **Tubes** using **Hooks** (#P4).

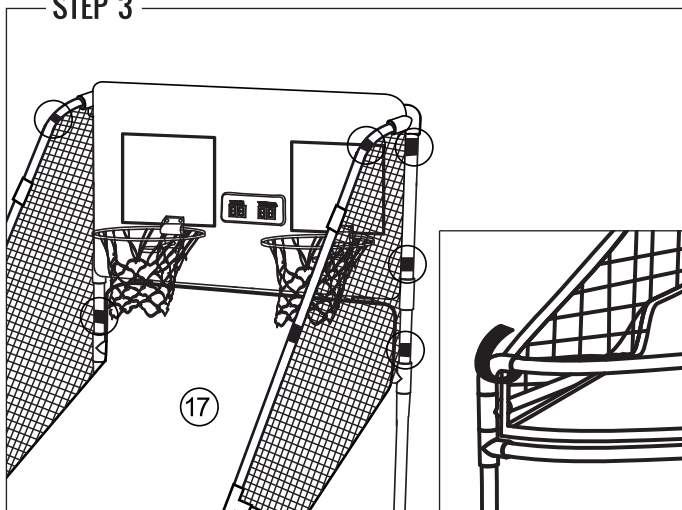STEP 3




PARTS

17  x1


NOTE

Self-stick straps attach **Ball Return Net** (#17) to the main frame (pre-installed).

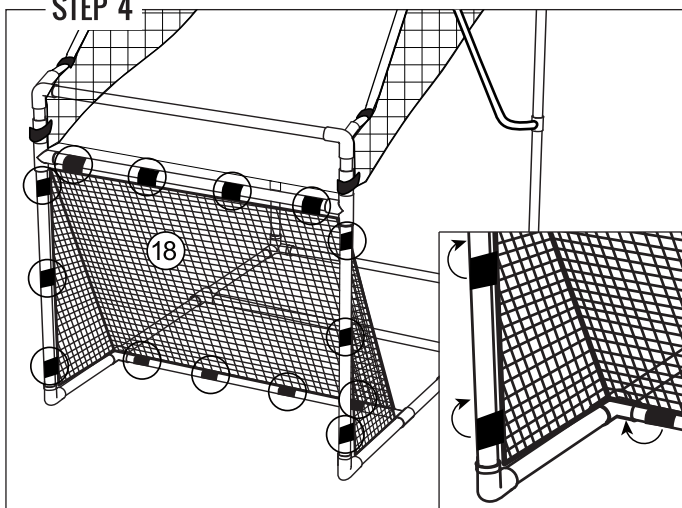STEP 4



PARTS

 18  x1

NOTE

Self-stick straps attach **Net** (#18) to the bottom of main frame.

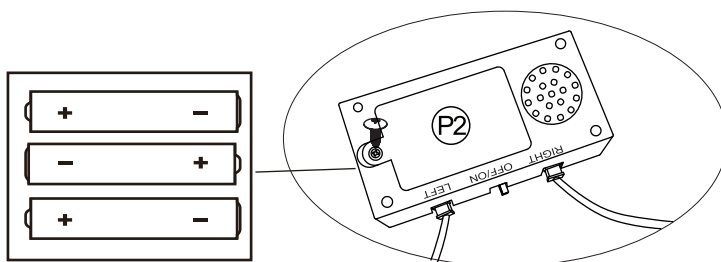
ELECTRONIC SCORER OPERATION

Install Batteries

Battery Box: Unscrew bolt using a screwdriver (not included) and open the battery box. Insert 3 “AAA” batteries (not included) in the order of polarity as shown on the inside cover. Then re-attach cover. Turn the power ON using the ON/OFF switch.

Reminding:

- Batteries must be installed according to the correct polarization (+ and -) requires.
- Please clean the battery contacts and also those of the devices prior to battery installation.
- If the game will not be used for a long period of time, we recommend that the batteries should be removed.



⚠ WARNING:

- 1) Requires 3 “AAA” batteries (not included).
- 2) Do not mix old and new batteries.
- 3) Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.

YOU ARE NOW READY TO PLAY!

GAME INSTRUCTIONS

How To Play

1. While game is in Sleep Mode, if a basketball is scored, the game will turn back on and the score board will begin the 5 sec. countdown.
2. After finishing the game, Turn OFF the scorer by using the ON/OFF switch. NOTE: The scoreboard will turn off after 5 minutes, if not in use, however, we recommend turning the ON/OFF switch to OFF when the game will not be used for an extended period of time.

WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: THE EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE; PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCE RADIO/TV TECHNICIAN FOR HELP.