 


**Franklin®**

FUTURE  
\*\*\*CHAMPS®

# INFLATABLE ARCHERY TARGET SET

 
ITEM NUMBER: **60182**

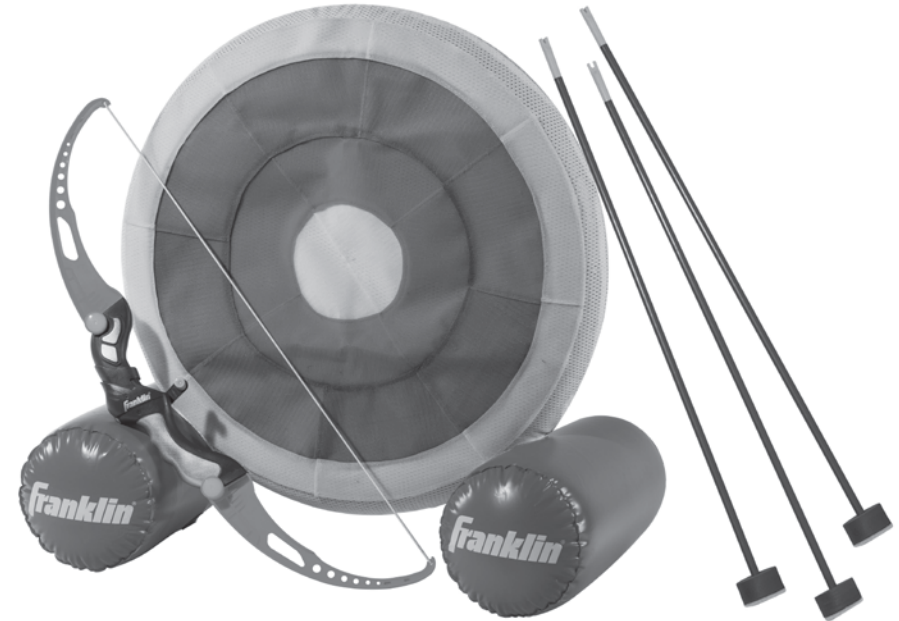

**⚠ WARNING:**  
Do not over inflate. Do not use as flotation device. Keep away from fire. Store in dry climate.

**⚠ CAUTION:**  
Not for use by children without adult supervision. Please read the instructions carefully. Caution should be taken when shooting arrows. Play in a clear area. Do not aim at eyes or face.

**STEP 2**

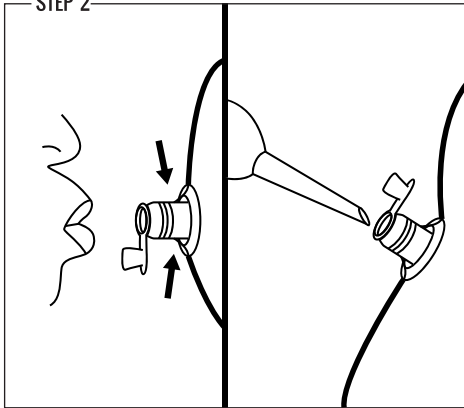

**PARTS**



**NOTE**

Blow up the rest of the product with air, either by mouth or by pump.

There are three inflation valves: one for the main unit and one for each base.

An air compressor or foot pump is recommended for inflation (not included).

**INFLATION:**

To inflate using your mouth - Unplug the air valve plug and pinch the bottom of the inflation valve to release the inner flap. A small opening will be created allowing air to flow.

To inflate using an air compressor or foot pump - Unplug the air valve plug and pinch the bottom of the inflation valve to release the inner flap. Insert the needle past the inner flap and inflate accordingly.

Once the product is inflated, close the air valve plug to keep the air inside.

**YOU ARE NOW READY TO PLAY!**

Made In China  
Franklin Sports Inc.  
Stoughton, MA 02072



For replacement parts:  
Visit: [www.franklinsports.com/60182](http://www.franklinsports.com/60182)  
Email: [parts@franklinsports.com](mailto:parts@franklinsports.com)  
Call: 1-800-225-8649

**NOTE: PRINT FRONT TO BACK**



# CUSTOMER SERVICE COMMITMENT

Thank you for purchasing this Franklin® product! In the event that the product you've purchased has missing or damaged parts, please contact us at:

**parts@franklinsports.com**

or

Visit our website at: **www.franklinsports.com/60182**

If possible, please include product part number and parts description so we can best assist you.


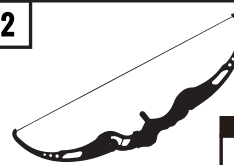 
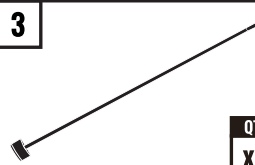 
## WE'RE HERE FOR YOU!

### PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE IT WAS PURCHASED FROM.

### WE ARE COMMITTED TO FULFILLING ALL REPLACEMENT PART NEEDS IMMEDIATELY.

Thank you for your continued support, and welcome to the #FranklinFamily!

## PARTS LIST

 
<p><b>1</b></p>  <p>Inflatable Archery Target</p> <p>QTY <b>x1</b></p>	<p><b>2</b></p>  <p>Bow</p> <p>QTY <b>x1</b></p>	<p><b>3</b></p>  <p>Self-Stick Arrows</p> <p>QTY <b>x3</b></p>
---	---	---

## ASSEMBLY INSTRUCTIONS


### GENERAL NOTE

Remove the product from the box and make sure all of the parts from the parts list are included.

### STEP 1

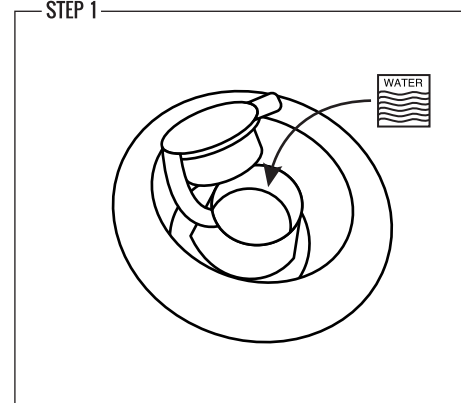

### PARTS

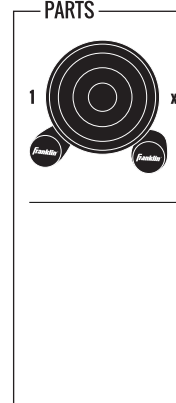 

### NOTE

OPTIONAL:  
Fill the base of the **Inflatable Archery Target (#1)** with water.

This feature has been added for increased weight if playing outside. For indoor play, you may choose to skip this step.